

Nathan Hunter

Kapok Dining Table Assembly

Your table may be a different size, shape or style

1. After unpacking, lay the top of the table upside-down (holes facing up) on a blanket or soft surface:




2. Note the hole in the center of the table top. In the next step the short dowel in the top of the base will drop into this hole, aligning the top and the base.


3. Set the base (also upside-down) onto the table top, allowing the short dowel to drop into the center hole. Then rotate the base until the holes in the "connecting plate" align with the holes in the underside of the table top:



4. Find the screws and hex key that were sent with your table:

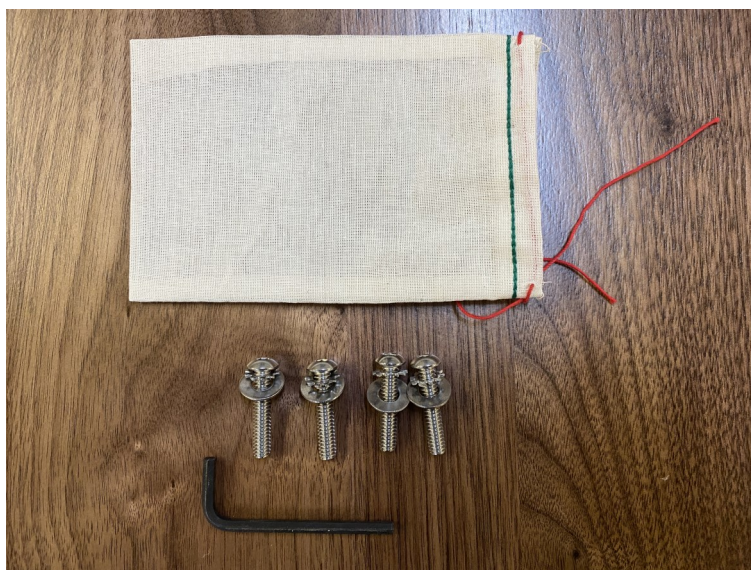

5. Each screw should have 2 washers—a lock washer (wavy edge) and a flat washer. Insert the screws with washers into each of the holes in the base and tighten all with the hex key. After tightening, loosen each screw approx. 1/4 turn to allow wood movement in the top.

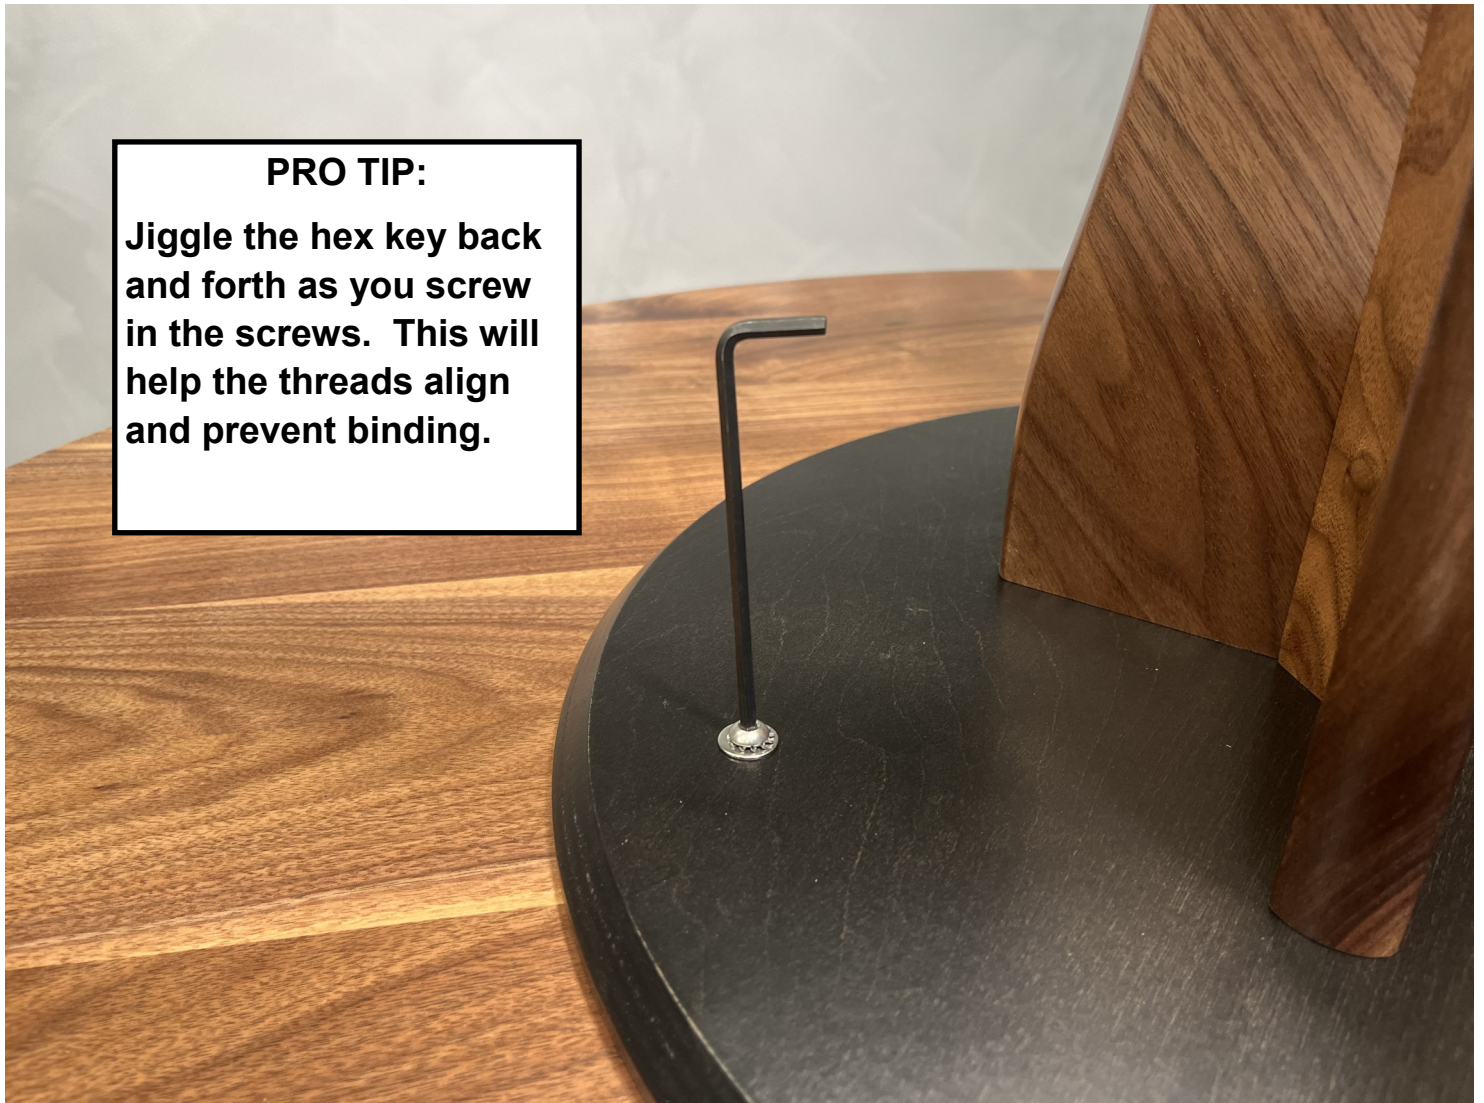

Flip the table over and enjoy!