














We want assembly to be easy, so please feel free to contact us if you have any questions: 812-876-0677

Here's what's in the package

-Your parts may look a little different from these, depending on which bed you ordered, but they all work the same.

<p>Upper Headboard </p> <p>Lower Headboard </p>	<p>Footboard </p> <p>OR</p> <p>Slim Footboard </p>
<p>Side Rails (2) </p>	<p>Bundle of slats </p>
<p>Center rail with feet (beds larger than twin) </p>	<p>Headboard connectors </p> <p>Center Rail Brackets </p>
<p>Button Screws </p> <p>Hex key </p>	

Step-By Step Instructions:


1. Assemble the side rails to the lower headboard by inserting the metal hooks on the ends of the side rails into the metal sockets of the lower headboard.



2. Assemble the other ends of the side rails to the footboard in the same manner. Ensure that the hardware is fully seated. You should hear a click when it's fully seated. This may require pushing downward near the ends of the sideboards with your body weight. Your bed should now look like this (may have a different footboard):




3. Attach the two metal adjustable feet to the center rail. Slide the center rail brackets onto the ends of the rail with the wood pins facing outward.

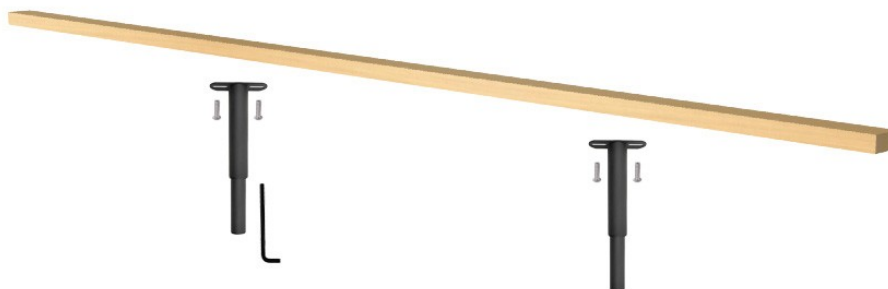

4. Slide the center rail brackets onto the ends of the rail with the wood pins facing outward. Put the center rail in place and slide the brackets outward to engage the wood pins with the holes in the headboard and footboard.



5. Use 1-1/2" bolts in the remaining bracket holes to attach the brackets to the headboard and footboard.

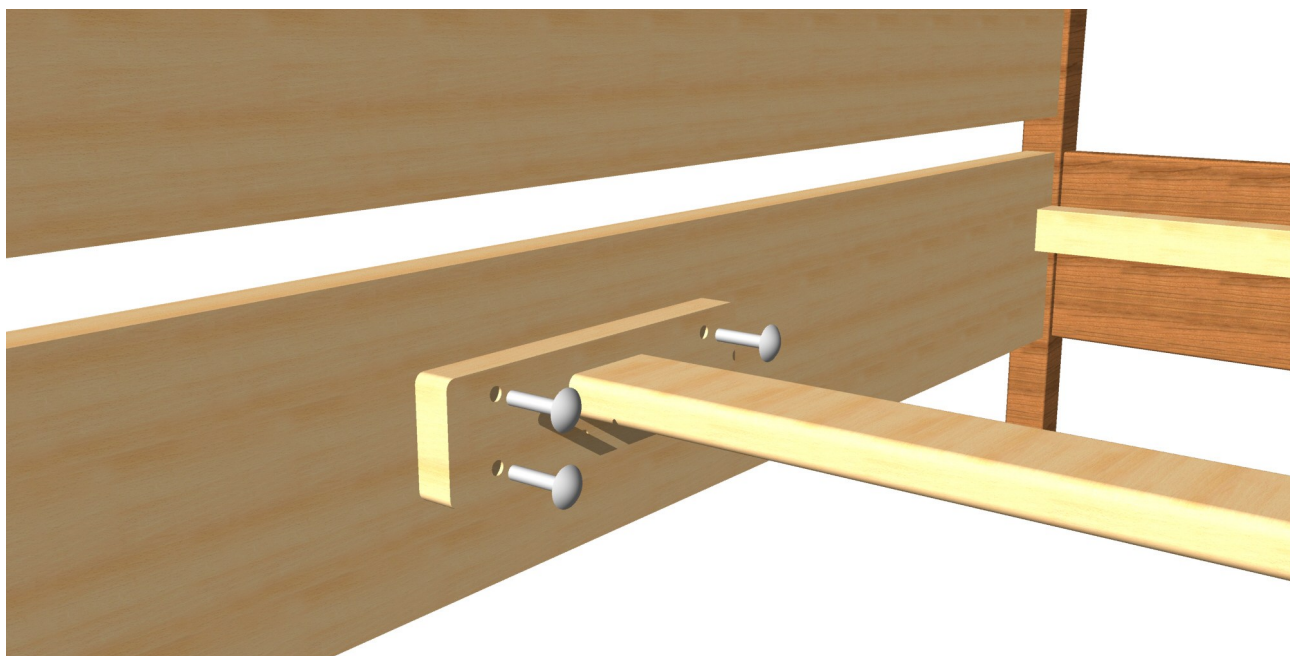


6. Adjust each metal adjustable foot by rotating the bottom half of the foot until it touches the floor.


7. Place the slats in the notches of the side rail supports:



8. Place upper headboard onto the lower headboard, allowing the wooden pegs in the lower to fit into the holes in the upper:

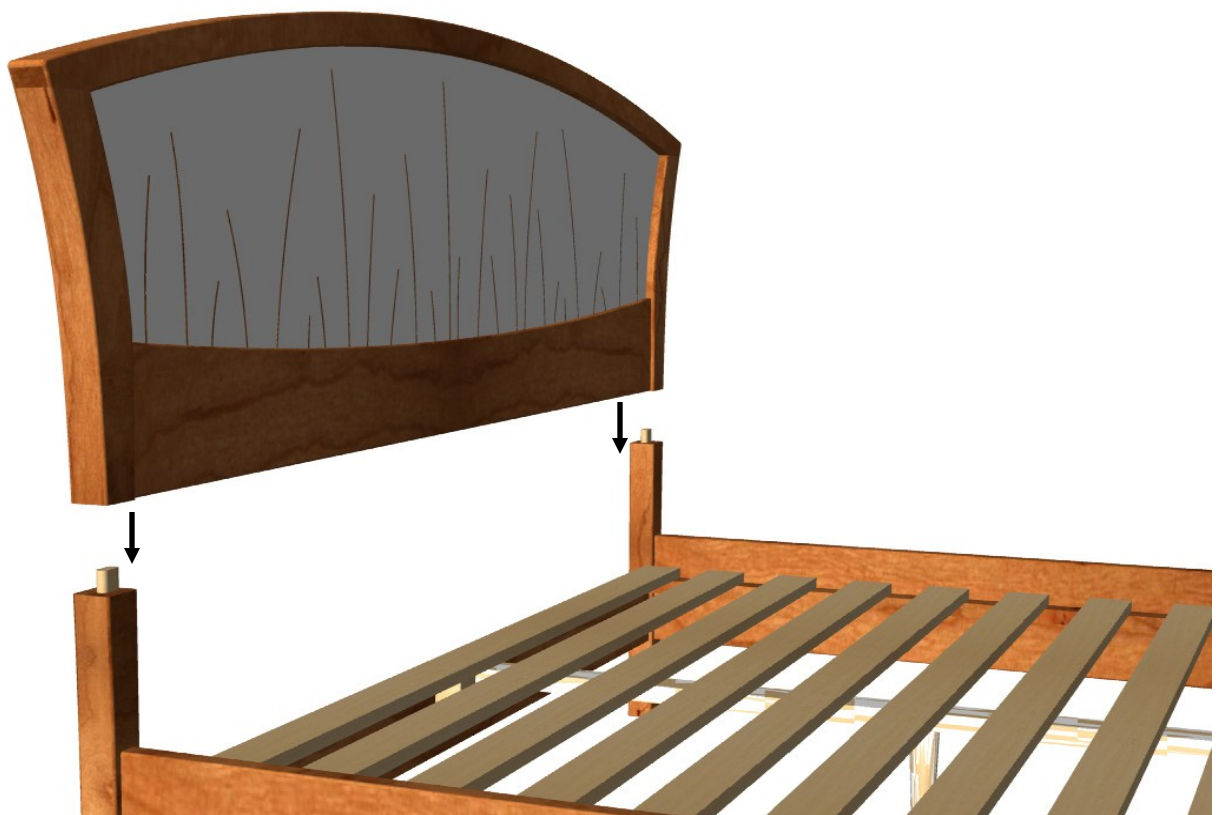

7. Connect the upper and lower headboard sections using the headboard connectors, screws and hex key:

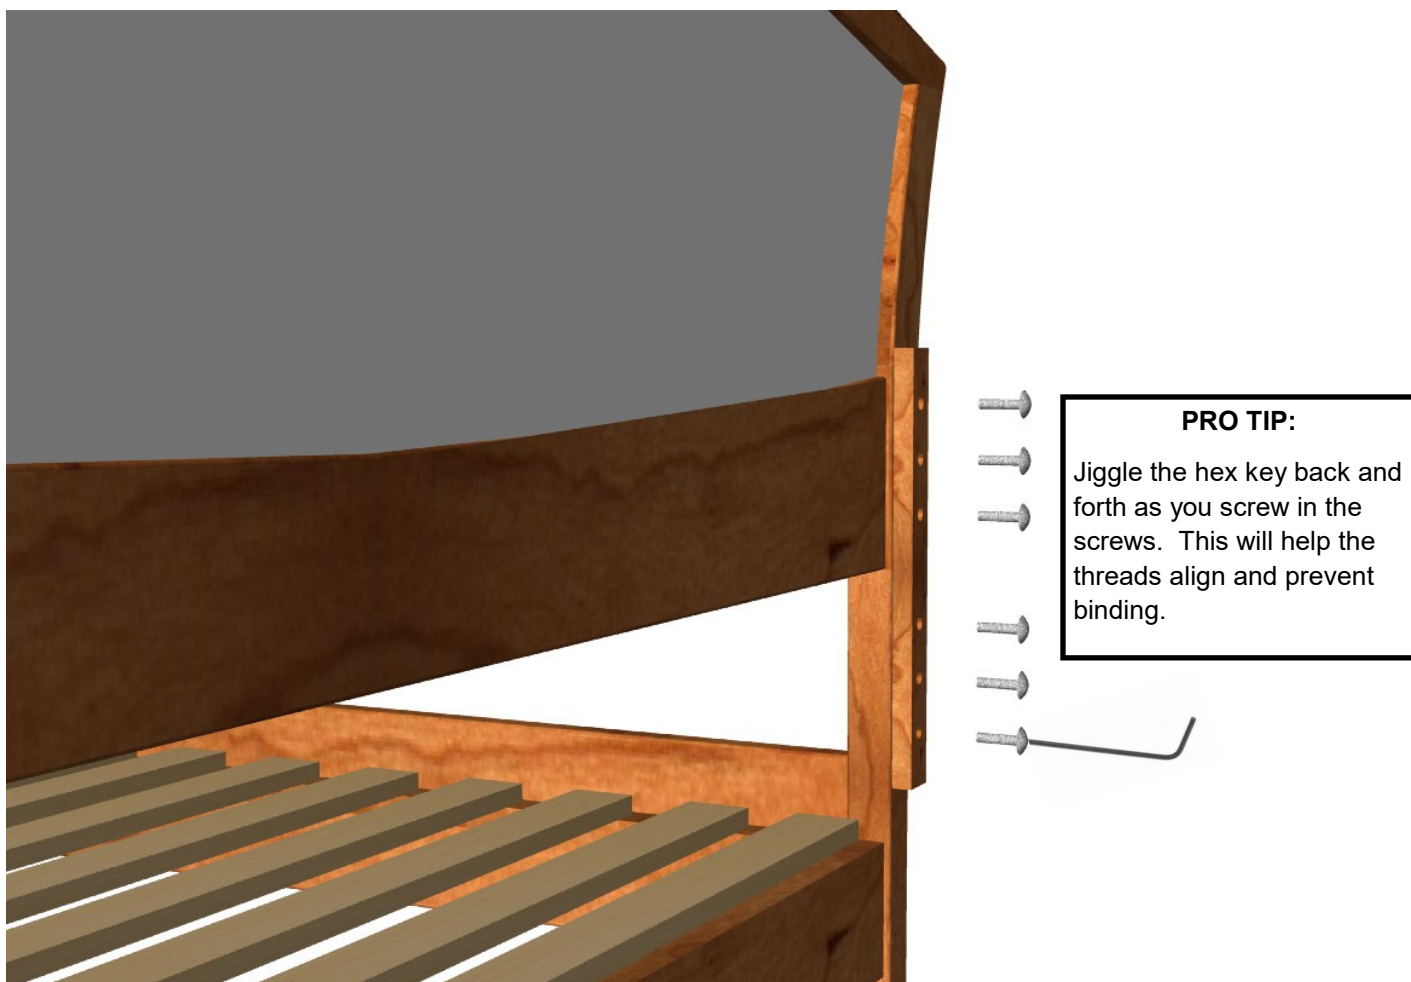

Finished!