














**We want assembly to be easy, so please feel free to contact us if you have any questions: 812-876-0677**

**Here's what's in the package**

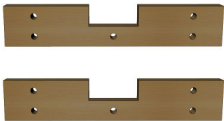-Your parts may look a little different from these, depending on which bed you ordered, but they all work the same.

<p>Upper Headboard</p>  <p>Lower Headboard</p> 	<p>Footboard OR Slim Footboard</p>  
<p>Side Rails (2)</p> 	<p>Bundle of slats</p> 
<p>Center rail with feet (beds larger than twin)</p> 	<p>Headboard connectors</p>  <p>Center Rail Brackets</p> 
<p>Button Screws</p>  <p>Hex key</p> 	

## **Step-By Step Instructions:**


1. Assemble the side rails to the lower headboard by inserting the metal hooks on the ends of the side rails into the metal sockets of the lower headboard.




2. Assemble the other ends of the side rails to the footboard in the same manner. Ensure that the hardware is fully seated—this may require pushing downward near the ends of the sideboards with your body weight. Your bed should now look like this (may have a different footboard):



3. Attach the center rail brackets to the inside faces of the lower headboard and the footboard. Insert five screws for each bracket into the pre-installed metal inserts.

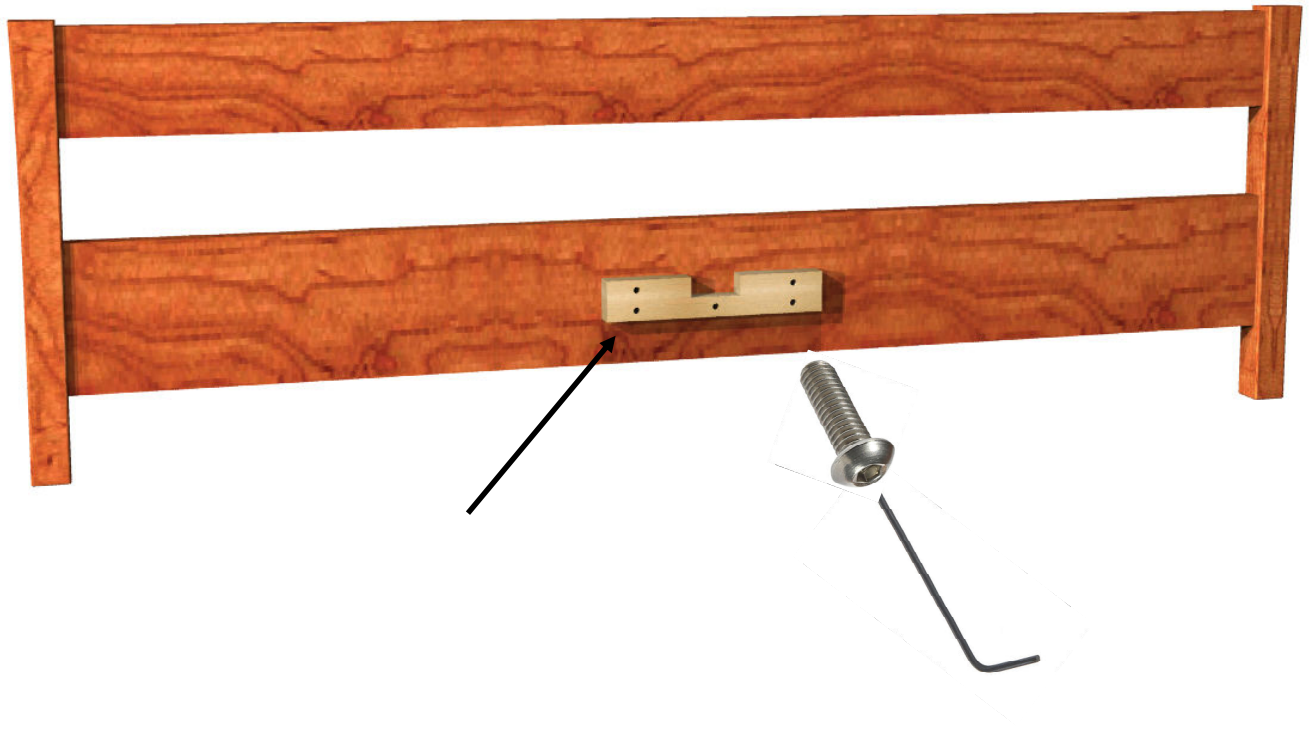


4. Screw the 2 peg-shaped feet into the center rail and place the center bar into the brackets on the inside of the lower headboard and footboard:

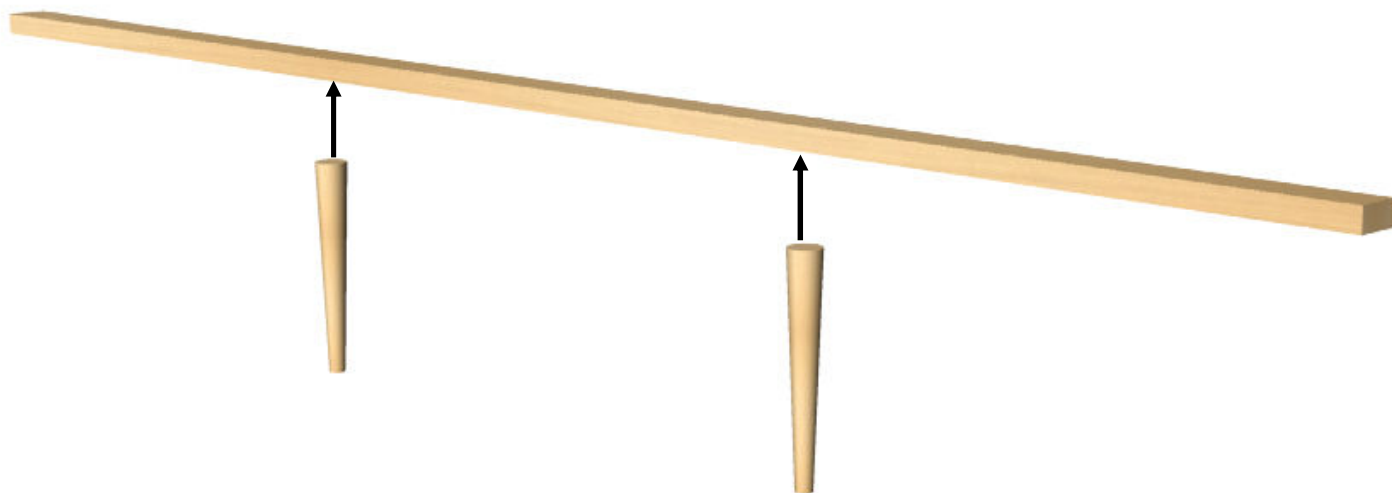

5. Spread the bundle of slats across the bed, resting on the slat supports and center bar:




6. Place upper headboard onto the lower headboard, allowing the wooden pegs in the lower to fit into the holes in the upper:

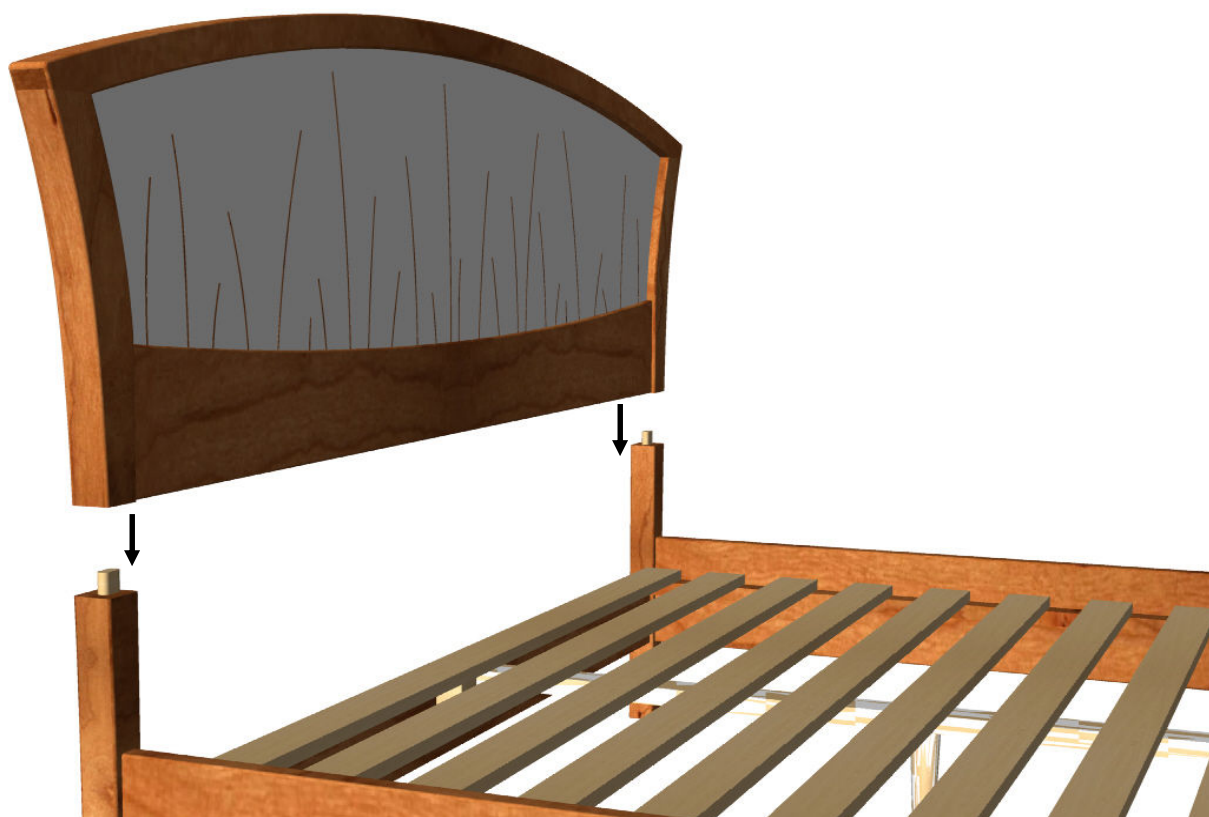



7. Connect the upper and lower headboard sections using the headboard connectors, screws and hex key:

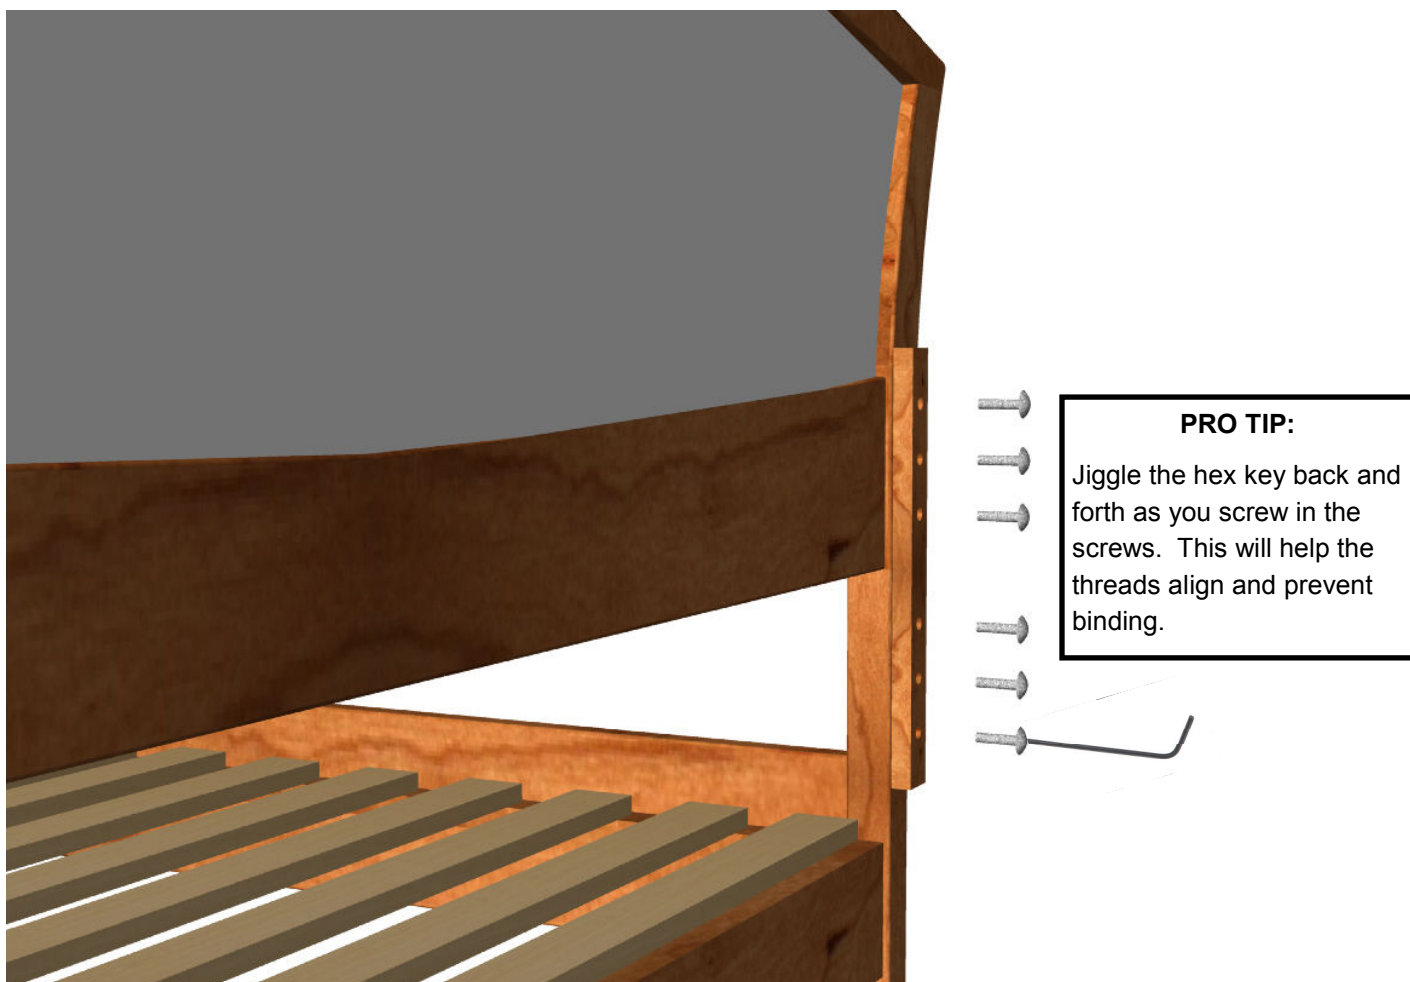

**Finished!**